




## **\*\*IMPORTANT\*\***

# Supplemental Instructions for Rock Random, Giant River Rock, Large Riverstone Interlock or Fieldstone Panels

Thank you for choosing Texture Plus for your panel needs. We hope you will enjoy your new Rock Random, Giant River Rock, Large Riverstone Interlock or Fieldstone panels. In order to ensure the best installation results, we want to provide you with some important instructions to follow.

Unlike our other interlocking panels which join with staggered edges on the short end, Rock Random, Giant River Rock, and Fieldstone panels need to be installed in a "Brick Pattern" along the long side of the panel so that they join together properly. This means that each panel should be aligned in a way that creates a running bond pattern similar to the way that bricks are laid in a wall.

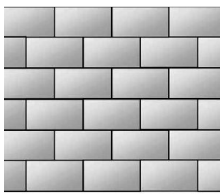

Running-bond

**To achieve the "Brick Pattern," please follow these steps:**

Start by installing the first panel at the bottom of the wall or surface. Align the panel with the bottom edge of the surface and ensure that it is level.

Install the second panel next to the first panel, making sure that it is positioned to create a running bond pattern. The short edge of the second panel should overlap the long edge of the first panel.

Continue installing the panels in this way, always aligning each panel to create a running bond pattern. Use a level to ensure that each panel is installed correctly and flush with the surface.

For best results, stagger the seams between the panels to create a more natural and realistic appearance.

By following these instructions, you can ensure that your Rock Random, Giant River Rock, or Fieldstone panels are properly aligned and joined together, creating a beautiful and seamless appearance. If you have any questions or concerns about the installation process, please do not hesitate to contact our customer service team for assistance.